




THIS THERMOSTAT IS SUITABLE FOR WATER HEATING,  
ELECTRIC HEATING AND GAS BOILER

User Notes

- 1.Please read this manual carefully. Improper operation may damage the product or cause dangerous conditions.
  - 2.The installation personnel must be well-trained and experienced service technicians.
  - 3.After installation, please read this manual carefully and operate the product according to the instructions.
- Caution: Risk of electric shock or equipment damage.

Wiring Diagram

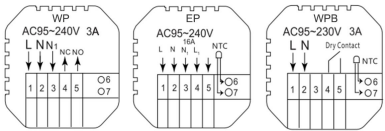

Note: WP for water heating; EP for electric heating; WPB for gas boiler

Operating Instruction

- 1. Power on/off: press M for 5 seconds to turn on/off the thermostat.
- 2. Press the M key to switch between manual and automatic modes.
- 3. Long press M key and ˘ key to enter the clock setting, press M key to switch Settings Item, press ˆ and ˘ keys to adjust the value of each parameter.
- 4. Press ˆ and ˘ for 5 seconds to add or cancel the child lock.

Welcome


Thank you for your trust and support. By adopting higher-end technology and more perfect technology, your new thermostat will provide you with the right temperature environment every day in the future, making your life more comfortable and your living environment more stylish and beautiful. For detailed instructions on the installation and use of this thermostat, please read this manual carefully. Please contact a professional to install the thermostat for you and install and use the product to the extent permitted by law

Application


Intelligent digital temperature controller is a floor heating system suitable for room temperature control and household temperature control. It controls the operating state of the floor heating equipment by comparing the ambient temperature with the set temperature, which improves comfort and achieves energy saving. This digital temperature controller adopts microcomputer control technology and is equipped with full-screen display touch buttons, which is elegant in design and easy to use. The thermostat has manual automatic, programmable and state memory functions.

Installation procedure


This product is installed with a standard 86 control switch (in compliance with European regulations)

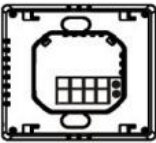


1. Connect the power supply box according to the wiring diagram.



2. Push the panel up and take down the panel.

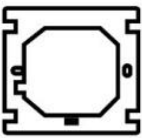

3. Install the fixed plate of thermostat in electrical connection box with screws.



4. Make the panel buckle to the fixed plate and push it down.

Advanced options

When POWER OFF, press the M key and the ˆ key for 5 seconds to enter the advanced option setting.

Press M to enter the next option, press ˆ and ˘ to adjust, and long press M to exit the height Level option.

1	Temperature compensation	The default value of the calibration room temperature is -2 ˚C. Press the up and down keys to adjust. The adjustable range is 9.9 ˚C to -9.9 ˚C.
2	Sensor selection	The temperature sensor is selected as IN by default. Press the up and down keys to adjust as IN respectively, indicating that the internal.
3	Modify the temperature limit	The default temperature limit value is 35 ˚C. Press the up and down keys to adjust the range from 5 ˚C to 60 ˚C.
4	Temperature difference start	The default temperature difference is set to 1 ˚C. Press the up and down keys to adjust the range to 1-10 degrees.
5	Antifreeze function	Set the default anti-freeze function to OFF, display OFF, press the up key to turn on anti-freeze and display ON
6	Holiday option and turn off weekly	Set the default rest day as double OFF. Press the up and down keys to adjust it to double OFF (1-5), single OFF (1-6), no OFF (1-7) and turn off week programming (OFF).
7	Primary and secondary reverse selection	Set the default main and auxiliary reversal to 0. Press the up and down keys to adjust 0 to turn off the main and auxiliary reversal. 01 means auxiliary reverse, 02 means auxiliary reverse, 03 means main and auxiliary reverse, shutdown and antifreeze is not on, stop output
8	Passive linkage output delay time	Set the default passive linkage delay time to 0. Press the up and down keys to adjust the range of 0-5 minutes.
9	Set upper temperature limit	The default value of the set temperature upper limit is 60 ˚C, and the adjustment range is 35-95 ˚C by pressing the up and down keys.
10	Restore Factory Defaults	Set to restore the factory default setting to display “-” Press the up button to adjust the display “----”, press the enter button to restore the factory settings


Product packaging

Thermostat host-----	1 PC	Manual-----	1 PC
Qualification certificate-----	1PC	Screw-----	2 PCS
Sensing line (optional)-----	1 PC		

Product Model

WP Plumbing 3A  
EP Electric Heating 16A  
WPB linkage, gas boiler 3A

Description of display & Icon

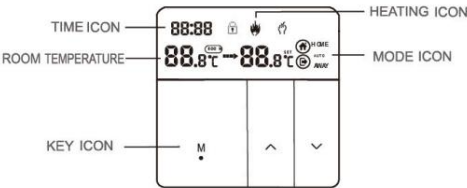

Technical Data

- 1. Temperature sensor: NTC
- 2. Temperature accuracy: ±1 ˚C
- 3. Power consumption: < 1W
- 4. Voltage: AC 95~230V 60Hz
- 5. Load current: 3A/16A
- 6. Temperature setting: 5~60˚C